### DEPARTMENT OF TRANSPORTATION

Revision: 1 Date: 08/18/89

# FEDERAL AVIATION ADMINISTRATION

WASHINGTON, D.C.

# MASTER MINIMUM EQUIPMENT LIST

SIKORSKY MODEL S-58T SERIES

Flight Standards Division Aircraft Evaluation Group, ASW-270 Federal Aviation Administration Southwest Region 4400 Blue Mound Road Fort Worth, TX 76193-0270

Telephone: (817) 624-5270 FTS: 734-5270

FEDERAL AVIATION ADMINISTRATION Page: I Revision: 1
MASTER MINIMUM EQUIPMENT LIST Date: 08/18/89

## SIKORSKY MODEL S-58T SERIES

## Table of Contents

SYSTEM NO.	SYSTEM	PAGE
	Table of Contents	I
	Log of Revisions	II
	Control Page	III
	Highlights of Change	IV
	Definitions	V, VI, VII, VIII
	Definitions	IX, X
	Preamble	XI, XII
	Guidelines for (O) & (M) Procedures	XIII
21	Air Conditioning	21-1
22	Auto Flight	22-1
23	Communications	23-1
24	Electrical Power	24-1
25	Equipment/Furnishings	25-1, 2
27	Flight Controls	27-1
28	Fuel	28-1
30	Ice and Rain Protection	30-1
31	Indicating/Recording Systems	31-1
33	Lights	33-1, 2
34	Navigation	34-1, 2
65	Rotors	65-1
73	Engine Fuel & Control	73-1
77	Engine Indicating	77-1

FEDERAL AVIATION ADMINISTRATION Page: II

Revision: 1

MASTER MINIMUM EQUIPMENT LIST Date: 08/18/89

SIKORSKY MODEL S-58T SERIES

Log of Revisions

	REV.NO.	DATE	PAGE NUMBERS	INITIALS
		07/23/86     08/18/89   	Complete ALL PAGES	

# FEDERAL AVIATION ADMINISTRATION Page: III

Revision: 1
MASTER MINIMUM EQUIPMENT LIST

Date: 08/18/89

# SIKORSKY MODEL S-58T SERIES

# Control Page

SYSTEM	PAGE	REV NO.	CURRENT DATE
Cover Page	_	1	08/18/89
Table of Contents	I	1	08/18/89
Log of Revisions	II	1	08/18/89
Control Page	III	1	08/18/89
Highlights of Change	IV	1	08/18/89
Definitions	V VI	2 2	06/14/89
	VI	2	06/14/89
		2	06/14/89 06/14/89
	VIII IX	2	06/14/89
	X	2	06/14/89
Preamble	XI	2	06/14/89
TIEAMDIE	XII	2	06/14/89
Guidelines for (O) & (M) Procedures	XIII	1	08/18/89
21	21-1	1	08/18/89
22	22-1	1	08/18/89
23	23-1	1	08/18/89
24	24-1	1	08/18/89
25	25-1	1	08/18/89
	25-2	1	08/18/89
27	27-1	1	08/18/89
28	28-1	1	08/18/89
30	30-1	1	08/18/89
31	31-1	1	08/18/89
33	33-1	1	08/18/89
	33-2	1	08/18/89
34	34-1	1	08/18/89
	34-2	1	08/18/89
65	65-1	1	08/18/89
73	73-1	1	08/18/89
77	77-1	1	08/18/89

FEDERAL AVIATION ADMINISTRATION Page: IV

Revision: 1
MASTER MINIMUM EQUIPMENT LIST Date: 08/18/89

### SIKORSKY MODEL S-58T SERIES

### Highlights of Change 1

- This change represents a major revision affecting all pages and replaces the existing document.
- 2. The Preamble and Definitions included with this revision reflect substantial changes in both of them.
- 3. All items are categorized as A, B, or C to specify the required repair intervals.
- 4. The entire document has been updated to standardize format without changing relief.
- 5. "If installed" is no longer utilized. It has been removed and optional items are not identified in column 1. When included on the MMEL, optional equipment items are shown as a variable "-" in column 2. The operator's MEL will reflect the actual number installed.
- 6. Items with no relief have been deleted. Airworthiness items not shown in the MMEL must be operative prior to dispatch for all flight conditions.
- 7. Easily removed and/or replaced items (First Aid Kit, Portable Fire Extinguisher, Personal Flotation Devices, Life Rafts, etc.) are not appropriate on the MMEL and have been deleted. These items must be installed and operatived when required by FAR.
- 8. Throughout the MMEL, certain items of optional equipment have been added to update and standardize the document with those MMEL's on which an FOEB has recently been completed.

Revision: 2
MASTER MINIMUM EQUIPMENT LIST Date: 06/14/89

Page: V

# Definitions (Effective 6/14/89)

SIKORSKY MODEL S-58T SERIES

1. System Definitions.

System numbers are based on the Air Transport Association (ATA) Specification Number 100 and items are numbered sequentially.

- a. "Item" (Column 1) means the equipment, system, component, or function listed in the "Item" column.
- b. "Number Installed" (Column 2) is the number (quantity) of items normally installed in the aircraft. This number represents the aircraft configuration considered in developing this MMEL. Should the number be a variable (e.g., passenger cabin items) a number is not required.

NOTE: Where the MMEL shows a variable number installed, the MEL must reflect the actual number installed or an alternate means of configuration control approved by the Administrator.

c. "Number Required for Dispatch" (Column 3) is the minimum number (quantity) of items required for operation provided the conditions specified in Column 4 are met.

NOTE: Where the MMEL shows a variable number required for dispatch, the MEL must reflect the actual number required for dispatch or an alternate means of configuration control approved by the Administrator.

- d. "Remarks or Exceptions" (Column 4) in this column includes a statement either prohibiting or permitting operation with a specific number of items inoperative, provisos (conditions and limitations) for such operation, and appropriate notes.
- e. A vertical bar (change bar) in the margin indicates a change, addition or deletion in the adjacent text for the current revision of that page only. The change bar is dropped at the next revision of that page.
- 2. "Airplane/Rotorcraft Flight Manual" (AFM/RFM) is the document required for type certification and approved by the responsible FAA Aircraft Certification Office. The FAA approved AFM/RFM for the specific aircraft is listed on the applicable Type Certificate Data Sheet.

Revision: 2
MASTER MINIMUM EQUIPMENT LIST Date: 06/14/89

Page: VI

#### SIKORSKY MODEL S-58T SERIES

# Definitions (Effective 6/14/89)

- 3. "As required by FAR" means that the listed item is subject to certain provisions (restrictive or permissive) expressed in the Federal Aviation Regulations operating rules. The number of items required by the FAR must be operative. Items installed that are in excess of the FAR requirements may be permitted by the operator's MEL to be inoperative if not otherwise required by the MMEL.
- 4. "\*" symbol in Column 4 indicates the listed item if inoperative, must be placarded to inform and remind the crewmembers and maintenance personnel of the equipment condition.

NOTE: To the extent practical, placards should be located adjacent to the control or indicator for the item affected; however, unless otherwise specified, placard wording and location will be determined by the operator.

5. "-" symbol in Column 2 and/or Column 3 indicates a variable number (quantity) of the item installed.

NOTE: Where the MMEL shows a variable number installed, the MEL must reflect the actual number installed or an alternate means of configuration control approved by the Administrator.

- 6. "Deleted" in the remarks column after a sequence item indicates that the item was previously listed but is now required to be operative if installed in the aircraft.
- 7. "ER" refers to extended range operations of a two-engine airplane which has a type design approval for ER operations and complies with the provisions of Advisory Circular 120-42.

Revision: 2
MASTER MINIMUM EQUIPMENT LIST Date: 06/14/89

Page: VII

#### SIKORSKY MODEL S-58T SERIES

# Definitions (Effective 6/14/89)

- 8. "Federal Aviation Regulations" (FAR) means the applicable portions of the Federal Aviation Act and Federal Aviation Regulations.
- 9. "Flight Day" means a 24 hour period (from midnight to midnight) either Universal Coordinated Time (UCT) or local time, as established by the operator, during which at least one flight is initiated for the affected aircraft.
- 10. "Icing Conditions" means an atmospheric environment that may cause ice to form on the aircraft or in the engine(s).
- 11. Alphabetical symbol in Column 4 indicates a proviso (condition or limitation) that must be complied with for operation with the listed item inoperative.
- 12. "Inoperative" means a system and/or component malfunction to the extent that it does not accomplish its intended purpose and/or is not consistently functioning normally within its approved operating limit(s) or tolerance(s).
- 13. "Notes:" in Column 4 provides additional information for crewmember or maintenance consideration. Notes are used to identify applicable material which is intended to assist with compliance, but do not relieve the operator of the responsibility for compliance with all applicable requirements. Notes are not a part of the provisos.
- 14. Inoperative components of an inoperative system: Inoperative items which are components of a system which is inoperative are usually considered components directly associated with and having no other function than to support that system. (Warning/caution systems associated with the inoperative system must be operative unless relief is specifically authorized per the MMEL).

Revision: 2
MASTER MINIMUM EQUIPMENT LIST Date: 06/14/89

Page: VIII

#### SIKORSKY MODEL S-58T SERIES

# Definitions (Effective 6/14/89)

- 15. "(M)" symbol indicates a requirement for a specific maintenance procedure which must be accomplished prior to operation with the listed item inoperative. Normally these procedures are accomplished by maintenance personnel; however, other personnel may be qualified and authorized to perform certain functions. Procedures requiring specialized knowledge or skill, or requiring the use of tools or test equipment should be accomplished by maintenance personnel. The satisfactory accomplishment of all maintenance procedures, regardless of who performs them, is the responsibility of the operator. Appropriate procedures are required to be published as part of the operator's manual or MEL.
- 16. "(0)" symbol indicates a requirement for a specific operations procedure which must be accomplished in planning for and/or operating with the listed item inoperative. Normally these procedures are accomplished by the flight crew; however, other personnel may be qualified and authorized to perform certain functions. The satisfactory accomplishment of all procedures, regardless of who performs them, is the responsibility of the operator. Appropriate procedures are required to be published as a part of the operator's manual or MEL.
- NOTE: The (M) and (O) symbols are required in the operator's MEL unless otherwise authorized by the Administrator.
- 17. "Deactivated" and "Secured" means that the specified component must be put into an acceptable condition for safe flight. An acceptable method of securing or deactivating will be established by the operator.
- 18. "Visual Flight Rules" (VFR) is as defined in FAR Part 91. This precludes a pilot from filing an Instrument Flight Rules (IFR) flight plan.
- 19. "Visual Meteorological Conditions" (VMC) means the atmospheric environment is such that would allow a flight to proceed under the visual flight rules applicable to the flight. This does not preclude operating under Instrument Flight Rules.

Revision: 2
MASTER MINIMUM EQUIPMENT LIST Date: 06/14/89

Page: IX

### SIKORSKY MODEL S-58T SERIES

# Definitions (Effective 6/14/89)

- 20. "Visible Moisture" means an atmospheric environment containing water in any form that can be seen in natural or artificial light; for example, clouds, fog, rain, sleet, hail, or snow.
- 21. "Passenger Convenience Items" means those items related to passenger convenience, comfort or entertainment such as, but not limited to, galley equipment, movie equipment, ash trays, stereo equipment, overhead reading lamps, etc.
- 22. Repair Intervals: All users of an MEL approved under FAR 121, 125, 129 and 135 must effect repairs of inoperative systems or components, deferred in accordance with the MEL, at or prior to the repair times established by the following letter designators:
- Category A. Items in this category shall be repaired within the time interval specified in the remarks column of the operator's approved MEL.
- Category B. Items in this category shall be repaired within three (3) consecutive calendar days (72 hours), excluding the day the malfunction was recorded in the aircraft maintenance record/logbook. For example, if it were recorded at 10 a.m. on January 26th, the three day interval would begin at midnight the 26th and end at midnight the 29th.
- Category C. Items in this category shall be repaired within ten (10) consecutive calendar days (240 hours), excluding the day the malfunction was recorded in the aircraft maintenance record/logbook. For example, if it were recorded at 10 a.m. on January 26th, the 10 day interval would begin at midnight the 26th and end at midnight February 5th.

The letter designators are inserted adjacent to Column 2.

23. Engine Indicating Crew Alerting System (EICAS), Electronic Centralized Aircraft Monitoring System (ECAM) or similar systems that provide electronic messages refer to a system capable of providing different priority levels of systems information messages (e.g., Warning, Caution, Advisory Status and Maintenance). Any airplane discrepancy message that affects dispatchability will normally be at status message level (e.g., Advisory Status) or higher.

Revision: 2
MASTER MINIMUM EQUIPMENT LIST Date: 06/14/89

Page: X

### SIKORSKY MODEL S-58T SERIES

# Definitions (Effective 06/14/89)

24. "Administrative control item" means an item listed by the operator in the MEL for tracking and informational purposes. It may be added to an operator's MEL by approval of the Principal Operations Inspector provided no relief is granted, or provided conditions and limitations are contained in an approved document (i.e. Structural Repair Manual, airworthiness directive, etc.). If relief other than that granted by an approved document is sought for an administrative control item, a request must be submitted to the Administrator. If the request results in review and approval by the FOEB, the item becomes an MMEL item rather than an administrative control item.

Page: XI
Revision: 2
Date: 06/14/89

MASTER MINIMUM EQUIPMENT LIST

### SIKORSKY MODEL S-58T SERIES

# Preamble (Effective 6/14/89)

The following is applicable for authorized certificate holders operating under Federal Aviation Regulations (FAR) Parts 121, 125, 129, 135: The FAR require that all equipment installed on an aircraft in compliance with the Airworthiness Standards and the Operating Rules must be operative. However, the Rules also permit the publication of a Minimum Equipment List (MEL) where compliance with certain equipment requirements is not necessary in the interests of safety under all operating conditions. Experience has shown that with the various levels of redundancy designed into aircraft, operation of every system or installed component may not be necessary when the remaining operative equipment can provide an acceptable level of safety. A Master Minimum Equipment List (MMEL) is developed by the FAA, with participation by the aviation industry, to improve aircraft utilization and thereby provide more convenient and economic air transportation for the public. The FAA approved MMEL includes those items of equipment related to airworthiness and operating regulations and other items of equipment which the Administrator finds may be inoperative and yet maintain an acceptable level of safety by appropriate conditions and limitations; it does not contain obviously required items such as wings, flaps, and rudders. The MMEL is the basis for development of individual operator MELs which take into consideration the operator's particular aircraft equipment configuration and operational conditions. Operator MELs, for administrative control, may include items not contained in the MMEL; however, relief for administrative control items must be approved by the Administrator. An operator's MEL may differ in format from the MMEL, but cannot be less restrictive than the MMEL. The individual operator's MEL, when approved and authorized, permits operation of the aircraft with inoperative equipment.

Equipment not required by the operation being conducted and equipment in excess of FAR requirements are included in the MEL with appropriate conditions and limitations. The MEL must not deviate from the Aircraft Flight Manual Limitations, Emergency Procedures or with Airworthiness Directives. It is important to remember that all equipment related to the airworthiness and the operating regulations of the aircraft not listed on the MMEL must be operative.

Page: XII
Revision: 2
Date: 06/14/89

MASTER MINIMUM EQUIPMENT LIST

### SIKORSKY MODEL S-58T SERIES

# Preamble (Effective 6/14/89)

Suitable conditions and limitations in the form of placards, maintenance procedures, crew operating procedures and other restrictions as necessary are specified in the MEL to ensure that an acceptable level of safety is maintained.

The MEL is intended to permit operation with inoperative items of equipment for a period of time until repairs can be accomplished. It is important that repairs be accomplished at the earliest opportunity. In order to maintain an acceptable level of safety and reliability the MMEL establishes limitations on the duration of and conditions for operation with inoperative equipment. The MEL provides for release of the aircraft for flight with inoperative equipment. When an item of equipment is discovered to be inoperative, it is reported by making an entry in the Aircraft Maintenance Record/Logbook as prescribed by FAR. The item is then either repaired or may be deferred per the MEL or other approved means acceptable to the Administrator prior to further operation. MEL conditions and limitations, do not relieve the operator from determining that the aircraft is in condition for safe operation with items of equipment inoperative.

When these requirements are met, an Airworthiness Release, Aircraft Maintenance Record/Logbook entry, or other approved documentation is issued as prescribed by FAR. Such documentation is required prior to operation with any item of equipment inoperative.

Operators are responsible for exercising the necessary operational control to ensure that an acceptable level of safety is maintained. When operating with multiple inoperative items, the interrelationships between those items and the effect on aircraft operation and crew workload will be considered.

Operators are to establish a controlled and sound repair program including the parts, personnel, facilities, procedures, and schedules to ensure timely repair.

WHEN USING THE MEL, COMPLIANCE WITH THE STATED INTENT OF THE PREAMBLE, DEFINITIONS, AND THE CONDITIONS AND LIMITATIONS SPECIFIED IN THE MEL IS REOUIRED.

Page XIII Revision: 1

MASTER MINIMUM EQUIPMENT LIST Date: 08/18/89

### SIKORSKY MODEL S-58T SERIES

### Guidelines for (0) & (M) Procedures

The FOEB has identified a need for certain procedures to provide an adequate level of safety while providing relief for some items. Those procedures must be established by the operator. The following guidelines specify the objectives of the required procedures:

- 21-2. (M) Procedure to inspect, deactivate, and secure heater.
- 23-3.a) (0) Alternate procedure to meet proviso.
- 28-3. (O) Alternate procedure to determine fuel quantity.
- 65-1. (M) Procedure to inspect, deactivate, and secure rotor brake.
- 65-2. (M) Procedure to inspect, deactivate, and secure rotor brake.
- 73-1. (M) Procedure to deactivate and secure system.

U.S. DEPARTMENT OF TRANSPO	RTATI	ON	
FEDERAL AVIATION ADMINISTR	ATION		MASTER MINIMUM EQUIPMENT LIST
AIRCRAFT:			REVISION NO: 1   PAGE:
SIKORSKY MODEL S-581	SERI	ES	DATE: 08/18/89   21-1
	2. ]	 NUMBEI	R INSTALLED
SYSTEM & SEQUENCE ITEM NUMBERS	   	   3. 1   -	NUMBER REQUIRED FOR DISPATCH
21 AIR CONDITIONING	1	 	4. REMARKS OR EXCEPTIONS
1. Blower, Fresh Air C Without Combustion Heater	-	   0   	   * 
2. Combustion Heater C	   -   	   0   	*(M)May be inoperative provided   heater is inspected,   deactivated, and secured.
3. Bleed Air Heater C	   - 	0 	   * 
	i I	 	  -

U.S. DEPARTMENT OF TRANSPOR	TATION			
FEDERAL AVIATION ADMINISTRA	TION		MASTER MINIMUM I	EQUIPMENT LIST
AIRCRAFT:		 	REVISION NO: 1	PAGE:
SIKORSKY MODEL S-58T	SERIES		DATE: 08/18/89	   22-1
 1.	2. NUN	 MBER INSTA	 LLED	
SYSTEM &   SEQUENCE ITEM   NUMBERS	   3	 3. NUMBER	REQUIRED FOR DI	 SPATCH
		4. RE	MARKS OR EXCEPT	IONS
1. Stabilization C   Augmentation System	1   -	 -   *May   	be inoperative :	for VFR.
İ		   		

-   U.S.	DEPARTMENT OF TRAN	ISPOR	TATI(	ON		
   FEDE	RAL AVIATION ADMINI	STRA	TION		MASTER MINIMUM EQUIPME	NT LIST
   AIRC	RAFT:				REVISION NO: 1	PAGE:
	SIKORSKY MODEL S-	-58T	SERIE	ES	   DATE: 08/18/89	23-1
		1.	2. N	 NUMBE	R INSTALLED	
	EM & ITEM BERS	 	-	   3. 1 	NUMBER REQUIRED FOR DISPATCH	
23	COMMUNICATIONS	·     		 	4. REMARKS OR EXCEPTIONS	
	Communications Systems (FM, HF, UHF, VHF, etc.)	C     	-	   0   	*As required by FAR.   	
2.   	Crew Interphone System	B   	1	   0     	<pre>  *May be inoperative for sin   pilot operations provided   no interference with requi   radio operations.</pre>	there is
3.	Cabin P.A. System	A                   	-		*(O)May be inoperative prov a) Alternate normal and emergency procedures operating restriction established and util passenger notificati b) Aircraft may continu or a series of flight maximum of 15 hours, shall not depart air where repairs or replacements can be	and/or ins are ized for on, and e flight its for a but port
		C		   	c) For nonpassenger car operations.	rying
4.	Cabin-to-Cockpit Telephone	C   	-	   0 	   * 	
		i   		   	 	
		i				

_   	-   U.S. DEPARTMENT OF TRANSPORTATION									
	FED	ERAL AVIATION ADMIN	ISTR	ATION		MASTER MINIMUM EQUIPMENT LIST				
	AIR	 CRAFT:				REVISION NO: 1   PAGE:				
		SIKORSKY MODEL S	-58T	SERII	ES	DATE: 08/18/89   24-1				
			1.	   2. 1	 NUMBEF	R INSTALLED				
	SEQ	TEM & UENCE ITEM BERS	I	-   	   3. N	NUMBER REQUIRED FOR DISPATCH				
		ELECTRICAL POWER		   	 	4. REMARKS OR EXCEPTIONS				
	1.	Volt-Ammeter, DC	С	   – 		*May be inoperative provided one voltmeter is operative.				
	2.	Inverter	В	2	1	*One may be inoperative for VFR.				
	3.	Starter/Generator	В	   2 	1	*One generator function may be inoperative for VFR operations.				
i I				 						
				    -	 					
1				   						
1				   	   					
				' 	' '	·				

FED	ERAL AVIATION ADMINI	STR	ATION		MASTER MINIMUM EQUIPME	NT LIST
AIR	 Craft:				REVISION NO: 1	PAGE:
	SIKORSKY MODEL S-	-58T	SERI	ES	   DATE: 08/18/89	25-1
		1.	2. ]	NUMBEI	R INSTALLED	
SEQ	TEM & UENCE ITEM BERS			   3. 1   -	NUMBER REQUIRED FOR DISPATCH	
 25	EQUIPMENT AND FURNISHINGS		   	     	4. REMARKS OR EXCEPTIONS	
1.	Passenger Seat Belts	С	 	   0   	*One required for each occu seat. If belt is inoperat missing, seat must be bloo placarded.	cive or
2.	Crew Member Shoulder Harness	В	   2     	   0     	*If harness becomes inopera aircraft shall not depart where repairs or replaceme can be made.	airport
3.	Personal Flotation Device		   	   	Deleted	I
4.	Helicopter Flotation System	С	   – 	   0 	*As required by FAR.	
5.	Utility Hoist	С	   –	0	*	
6.	Cargo Suspension System	С	   – 	   0 	   * 	
7.	Life Raft		 		Deleted	
8.	Pyrotechnic Signali Device	ing	   	   	Deleted	
9.	Hoist System	С	   –	I I 0	*	
10.	Emergency Locator Transmitter (ELT)	С	   – 	   0 	   * 	
11.	EMS Equipment	С	   -         	   0       	*May be inoperative provide is deativated and secured. (M) and (O) procedures may required and included in t carrier's appropriate docu	y be the air

-   U.S. DEPARTMENT OF TRANSPO 	RTATI	ION
   FEDERAL AVIATION ADMINISTR	ATION	MASTER MINIMUM EQUIPMENT LIST N
   AIRCRAFT:		REVISION NO: 1   PAGE:
SIKORSKY MODEL S-58T	SERI	IES   DATE: 08/18/89   25-2
1.		NUMBER INSTALLED
SYSTEM & SEQUENCE ITEM NUMBERS	   	3. NUMBER REQUIRED FOR DISPATCH
25 EQUIPMENT/FURNISHINGS		4. REMARKS OR EXCEPTIONS
13. Passenger Convenience Item(s)		*Passenger convenience items, as   expressed in this MMEL are those   related to passenger convenience,   comfort or entertainment such as,   but not limited to, galley   equipment, movie equipment, ash   trays, stereo equipment, overhead   reading lamps, etc. Items   addressed elsewhere in this   document shall not be included.   (M) and (O) procedures may be   required and included in the air   carrier's appropriate document.

U.S. DEPARTMENT OF TRANSPO	ORTATI	ON		
FEDERAL AVIATION ADMINIST	RATION		MASTER MINIMUM EQUIP	MENT LIST
AIRCRAFT:			REVISION NO: 1	PAGE:
SIKORSKY MODEL S-58	I SERI	ES	   DATE: 08/18/89	27-1
	2. ]	NUMBER	R INSTALLED	
SYSTEM & SEQUENCE ITEM NUMBERS	·	   3. N	UMBER REQUIRED FOR DISPATC	H
27 FLIGHT CONTROLS	i I	 	4. REMARKS OR EXCEPTIONS	
1. Cyclic Stick Trim C			*May be inoperative for V provided flight crewmemb cyclic at all times.	
	i	i i		

-   U.S 	U.S. DEPARTMENT OF TRANSPORTATION							
   FEI	DERAL AVIATION ADMINISTE	ATION		MASTER MINIMUM EQUIPMEN	IT LIST			
AIF	CRAFT:			REVISION NO: 1	PAGE:			
	SIKORSKY MODEL S-581	SERI	ES	DATE: 08/18/89	28-1			
	1.	2.	 NUMBE	R INSTALLED				
SEÇ	TEM & QUENCE ITEM IBERS	   	   3. I   -	NUMBER REQUIRED FOR DISPATCH				
	FUEL	 	 	4. REMARKS OR EXCEPTIONS				
1.	Fuel Booster Pump C	2     	   1   	*One may be inoperative prov   crossfeed valve is closed w   operating with minimum fuel	hen			
2.	Fuel Booster Pump C Caution Light ("#1/2 Eng Fuel Pump") or ("#1/2 Fuel Pump")	 	1           	*One may be inoperative, cau light illuminated with the switch in the on position, provided respective Fuel Booster Pump is checked wit crossfeed closed and found operative prior to flight.				
3.	Fuel Quantity C Indicator	2	   1   	<pre>  *(0)One may be inoperative p   approved alternate means   determining fuel quantit   available and utilized.</pre>	s for			
4.	Fuel Totalizer C	-	0	*   *				
5.	Deleted			Fuel Flow Indicator System shown in Chapter 77.	may be			

MASTER MINIMUM EQUIPMENT LIST FEDERAL AVIATION ADMINISTRATION  AIRCRAFT:  SIKORSKY MODEL S-58T SERIES  SIKORSKY MODEL S-58T SERIES  1.   2. NUMBER INSTALLED  SYSTEM & SEQUENCE SYSTEM   3. NUMBER REQUIRED FOR DISPATCH  NUMBERS     4. REMARKS OR EXCEPTIONS  30 ICE AND RAIN PROTECTION  PROTECTION  1. Pitot Tube Heater   B   -   0   *May be inoperative provided:				
AIRCRAFT:	MASTER MINIMUM EQUIPMENT LIST			
SIKORSKY MODEL S-58T SERIES   DATE: 08/18/89   30-1	 :			
1.   2. NUMBER INSTALLED   SYSTEM &				
SYSTEM &				
d) Single pilot operations, and   e) Right Pitot Tube Heater is   operative.	nd			
2. Windshield Wipers   C   2   0   *May be inoperative provided operations are not conducted in precipitation during takeoff or landing phases.				

U.S.	. DEPARTMENT OF TRAN	ISPOI	RTATIO	ON		
FEDE	ERAL AVIATION ADMINI	STRA	ATION		MASTER MINIMUM EQUIPMEN	IT LIST
AIRC	CRAFT:				REVISION NO: 1	PAGE:
	SIKORSKY MODEL S-	-58T	SERII	ES	   DATE: 08/18/89	31-1
		1.	   2. N	 NUMBEI	R INSTALLED	
	TEM &  JENCE ITEM  BERS		-   	   3. 1 	NUMBER REQUIRED FOR DISPATCH	
31	INDICATING/RECORDIN	 IG	     	     	4. REMARKS OR EXCEPTIONS	
	Clock Displaying Hours, Minutes, and Seconds with Sweep- Second Pointer or Digital Presentation	-	 	   1     	<pre>*Operative clock must be loc the instrument panel in a p that makes it plainly visik and usable by, any pilot at pilot's station.</pre>	oosition ole to,
		С	   –   	   0   	*May be inoperative for VFR   provided Elapsed Timer is   installed and operative.	
2.	Elapsed Timer	С	   – 	   0 	   *May be inoperative provided   is operative.	l Clock
3.	Hour Meter	С	- 	0	_   *	
	Aircraft/Engine Monitoring System	С	   – 	0	   * 	 
5.	Cockpit Voice Recorder	В	   –   	   0   	*May be inoperative provided   Flight Data Recorder is   installed and operative.	l   
6.	Flight Data Recorder	В		   0           	*May be inoperative provided Cockpit Voice Recorder is installed and operative.	l   

FEDERAL	AVIATION ADMINI	STRA	ATION		MASTER MINIMUM EQUIPMENT LIST
 AIRCRAFT	 :				REVISION NO: 1   PAGE:
SI	KORSKY MODEL S-	-58T	SERI	ES	
		1.	   2.	 NUMBEI	R INSTALLED
SYSTEM &   SEQUENCE ITEM   NUMBERS		   	   3. 1   -	NUMBER REQUIRED FOR DISPATCH	
 33 LIGH	 TS		 		4. REMARKS OR EXCEPTIONS 
	gation ition) Light em	С	   1 	   0 	   *May be inoperative for day VFR   operations. 
	-Collision t System	В	   1 	   0 	   *May be inoperative for day   operations.
Ligh	pit Instrument ting Systems	В		   0                               	<pre>*May be inoperative provided:    a) Sufficient lighting is       operative to make each       required instrument, control,       and other device for which it       is provided easily readable,    b) Direct rays and reflections       do not impair visibility       either inside or outside       aircraft,    c) Lighting intensity can be       controlled or preset to a       satisfactory level for the       expected flight conditions,       and    d) Lighting configuration at       dispatch is acceptable to       flight crew.</pre>
	ing Lights	C	 		
	ontrollable . ,	C	<b>-</b> 	0	*As required by FAR. 
2) F 5. Pilo	ixed t Map Light	С		0     0   	*     *May be inoperative provided   Cockpit Dome Light (Item 33-6)   is operative.

FED	ERAL AVIATION ADMINIS	STRA	ATION		MASTER MINIMUM EQUIPMENT LIST			
 AIR	 CRAFT:		REVISION NO: 1   PAGE:					
	SIKORSKY MODEL S-5	58T	SERII	ES	DATE: 08/18/89   33-2			
		1.	2.1	NUMBEI	R INSTALLED			
SYSTEM &   SEQUENCE   ITEM   NUMBERS		-   	   3. N   -	UMBER REQUIRED FOR DISPATCH				
 33	LIGHTS	 		 	4. REMARKS OR EXCEPTIONS			
6.	Cockpit Dome Light	C	   1 	   0 	*May be inoperative provided: a) For day VFR. OR			
				 	b) Pilot Map Light (Item 33-5) is operative.			
7.	Cabin Lighting System	C	   – 	   0 	* May be inoperative provided:  a) For day operations.  OR			
				     	b) Inoperative lights do not exceed fifty (50) percent of the total installed.			
8.	Internal Combustion Heater Advisory Light	C	 	   0   	*May be inoperative provided Heater is deactivated and secured.			
9.	Passenger Notice System (Fasten Seat Belt-No Smoking)	B   	   1 	   0 	*(O)May be inoperative provided:  a) Passengers are not carried.  OR			
		 		   	b) Alternate procedures are used for passenger notification.			
				     	OR c) Public address system is installed and operative.			
10.	Passenger Step Light	C	   – 	   0 	*			
11.	Cargo Flood Light	C I	   –	   0	*			
12.	Anti-Dazzle Lights	C I	   –	   0	*			
13.	Strobe Light System	C	 	   0 	*			
14.	Supplemental Lighting System	C	 	   0 	*			

FED	ERAL AVIATION ADMINIST	RATION		MASTER MINIMUM EQUIPMEN	NT LIST
 AIR	 CRAFT:			REVISION NO: 1	   PAGE:
	SIKORSKY MODEL S-58	T SERI	ES	   DATE: 08/18/89	   34-1
	1.	2.	 NUMBEI	R INSTALLED	
SYSTEM &   SEQUENCE   ITEM   NUMBERS		   	3. 1	NUMBER REQUIRED FOR DISPATCH	
 34	NAVIGATION	 		4. REMARKS OR EXCEPTIONS	
1.	Airspeed Indicator B	   2   	   1   	   *Left pilot station indicato   be inoperative for single p   operations.	
2.	Sensitive B Altimeter Adjustable for Barometric Pressure	   2   	   1   	   *Left pilot station indicate   be inoperative for single p   operations. 	
3.	Magnetic Direction Indicator			   Deleted 	
4.	Gyroscopic Rate- B of-Turn Indicator	2     	   1   	   *Left pilot station indicate   be inoperative for single p   operations.	
ō.	Gyroscopic B Direction Indicator	2	1 1	   *Left pilot station indicato   be inoperative for single p   operations.	
5.	Gyroscopic Pitch B and Bank Indicator	2	1 1	*Left pilot station indicate   be inoperative for single p   operations.	
7.	Vertical Speed B Indicator	2     	   1   	   *Left pilot station indicate   be inoperative for single p   operations.	_
3.	OAT/Free Air C Temperature Gauge	1	0	   *May be inoperative provided   temperature can be obtained   approved alternate onboard	d from
	Navigation Systems C (VOR, ILS, ADF, Long Range, etc.)	-	   0   	   *As required by FAR.   	
10.	Transponder C	1	0	   *As required by FAR.	
11.	Flight Director C	-	0	   *	

- 	U.S	U.S. DEPARTMENT OF TRANSPORTATION										
					NT LIST							
	FEDI	ERAL AVIATION ADMIN	ISTRA	NOITA	 							
 	AIR	CRAFT:	MASTER MINIMUM EQUIPMENT LIST  FION ADMINISTRATION    REVISION NO: 1									
İ		SIKORSKY MODEL S	-58T	SERII	ES	DATE: 08/18/89	34-2					
	CVC	PPM c	1.	2.1	2. NUMBER INSTALLED							
	SEQ	STEM &   QUENCE ITEM   MBERS			   3. N   -	3. NUMBER REQUIRED FOR DISPATCH						
i I		 34 NAVIGATION		   	'     	4. REMARKS OR EXCEPTIONS						
	12.	Radar Altimeter System	С	   – 		   * 						
	13.	Airborne Weather Radar	С	   – 		*As required by FAR.	 					
	14.	Slip-Skid Indicator	В	   2 	1     1   							
;     	15.	Alternate Static Source	С	   – 	   0		flight					
	16.	Standby Attitude Indicator	В		0     0   		flight					
	17.	Marker Beacon	С		0   	approach is not predicated						
	18.	DME	С	-               		navigation is not predicate						

U.S. DEPARTMENT OF TRANSPOR	RTATI(	NC					
FEDERAL AVIATION ADMINISTRA	ATION		MASTER MINIMUM EQUIPMEN	IT LIST			
AIRCRAFT:	REVISION NO: 1   PAGE:						
SIKORSKY MODEL S-58T	SERII	ES	   DATE: 08/18/89	65-1			
		2. NUMBER INSTALLED					
SYSTEM &   SEQUENCE ITEM   NUMBERS		3. NUMBER REQUIRED FOR DISPATCH					
65 ROTORS	 	4. REMARKS OR EXCEPTIONS					
1. Rotor Brake System C	   1       		*(M)May be inoperative provi a) Maintenance inspect determines the rotalis free, and b) System is rendered inoperative.	ction or disc			
2. Rotor Brake C Warning Light C			*(M)May be inoperative provi a) Maintenance inspect determines the rot is free, and b) System is rendered inoperative.	ction for disc			

U.S. DEPARTMENT OF TRANSPOR	RTATIC	N					
FEDERAL AVIATION ADMINISTRA	ATION		MASTER MINIMUM EQUIPM	ENT LIST			
AIRCRAFT:			REVISION NO: 1	PAGE:			
SIKORSKY MODEL S-58T	SERIE	S	   DATE: 08/18/89	   73-1			
1.		 IUMBEF	R INSTALLED				
SYSTEM & SEQUENCE ITEM NUMBERS	-     	 [ 					
73 ENGINE FUEL & CONTROL	 	     4. REMARKS OR EXCEPTIONS 					
1. Engine Air Line C Heater	i i		*(M)May be inoperative pro a) System is deactive b) Operations are considered above 2 degrees Condegrees F) outside temperature.	rated, and enducted (35			

FEDE	ERAL AVIATION ADMINIS	TRATION		MASTER MINIMUM EQUIPMENT LIST					
AIRO	 CRAFT:		REVISION NO: 1   PAG						
	SIKORSKY MODEL S-58	8T SERI	ES	DATE: 08/18/89   77-1					
1.			2. NUMBER INSTALLED						
SYSTEM &   SEQUENCE   ITEM   NUMBERS		   	3.1	NUMBER REQUIRED FOR DISPATCH					
 77	ENGINE INDICATING	-		4. REMARKS OR EXCEPTIONS					
1.	Gas Generator (Tachometer System (NG)	C   2                 	1   1             	*One may be inoperative provided:  a) Engine start is not required,  b) Operations are limited to 2,000 density altitude fo PT6T-3 equipped aircraft,  c) Operations are limited to 6,500 density altitude fo PT6T-6 equipped aircraft, and  d) Power assurance check completed same day is satisfactory.	r				
2.	Tachometer, Triple (Indicator	C   -	1 1	*Left pilot station indicator may be inoperative for single pilot operations.					
3.	Dual Torque ( Indicator	C   -	   1 	*Left pilot station indicator may be inoperative for single pilot operations.					
4.	Fuel Flow (Indicator System)	C   -		*					